 
MK ENGINEERINNG CO.,LTD

Fish Processing Machinery Flat Blade Setting Gauge

Handle



How to operate

Everybody can set the flat blade easily.

- 1. Insert flat brade, back plate, and specified bolt into . the cutter's body, but without tightening the bolt, yet.
- cutter's body and adjust the dial gauge there to zero position
- position (normally 0.5 mm 0.8 mm) without energizing the magnet.
- 4. Rotate the cutter's body and position the flat brade at the center of the setting plate. Energize the magnet. Then, the flat brade is lifted up and set to the proper position.



MK ENGINEERINNG CO.,LTD.

1060 ISHIZU YAIZUSHI SHIZUOKAKEN 425-0041, JAPAN TEL 054-625-8360 FAX 054-625-8361

Sales agent